



EC-790 Electronic Locker Lock Operating and Programming Instructions

FUNCTION	MODE		KEY SEQUENCE	NOTES
	PUBLIC	PRIVATE		

MASTER CODE FUNCTIONS

CHANGE MASTER CODE	✓	✓	[#] [Old Master Code] 01 [New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS .
CHANGE USER CODE		✓	[#] [Master Code] 02 [New User Code]	USER CODE IS FOUR DIGITS .
DELETE USER CODE	✓		[Master Code]	OPENS LOCK AND DELETES USER CODE
SET / CHANGE SUB-MASTER CODE	✓	✓	[#] [Master Code] 03 [New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS
DELETE SUB-MASTER CODE	✓	✓	[#] [Master Code] 07	DELETES SUB-MASTER CODE
SET PUBLIC MODE		✓	[logo] [Master Code] 08	DELETES ALL EXISTING USER CODES
SET PRIVATE MODE	✓		[logo] [Master Code] 09 [New User Code]	DELETES ALL EXISTING USER CODES
OPEN LOCK	✓	✓	[Master Code]	DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO		RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET TECHNICIAN MODE	✓		[#] [Master Code] 10 [New Technician Code]	TECHNICIAN CODE IS SIX DIGITS
REMOVE TECHNICIAN MODE	✓		[#] [Master Code] 11	DELETES TECHNICIAN CODE
SET AUDIBLE BUTTONS ON	✓	✓	[#] [Master Code] 12	UNIT WILL BEEP ON EACH BUTTON PRESS
SET AUDIBLE BUTTONS OFF	✓	✓	[#] [Master Code] 13	UNIT WILL OPERATE SILENTLY
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[#] [Master Code] 16 [Time Code]	SEE NOTES ON TIMERS BELOW.
SET AUTO-TIMED UNLOCK OFF	✓		[#] [Master Code] 17	UNIT WILL NOT OPEN AUTOMATICALLY

SUB-MASTER CODE FUNCTIONS

CHANGE USER CODE		✓	[#] [Sub-Master Code] 02 [New User Code]	USER CODE IS FOUR OR SIX DIGITS . (FOUR DEFAULT)
CHANGE SUB MASTER CODE	✓	✓	[#] [Sub-Master Code] 03 [New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS .
DELETE USER CODE	✓		[Sub-Master Code]	OPENS LOCK AND DELETES USER CODE
OPEN LOCK	✓	✓	[Sub-Master Code]	DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO		RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS

USER CODE FUNCTIONS

CHANGE USER CODE		✓	[#] [Old User Code] 02 [New User Code] [New User Code]	USER CODE IS FOUR DIGITS .
OPEN LOCK	✓	✓	[User Code]	
CLOSE LOCK	✓		[User Code] [User Code]	USER CODE IS ENTERED TWICE FOR CONFIRMATION
CLOSE LOCK		AUTO		RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS

TECHNICIAN CODE FUNCTIONS

OPEN LOCK	✓		[Technician Code]	DOES NOT DELETE USER CODE
CLOSE LOCK		AUTO		RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS

FUNCTIONS AVAILABLE TO ALL CODES

BATTERY CHECK	✓	✓	[#] [#]	REPLACE BATTERIES IF RED LIGHT SHOWS
---------------	---	---	---------	--------------------------------------

NOTES	TIMER FUNCTIONS - TIME CODE EXAMPLES	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.	TIME CODE 001 1 MIN	GREEN LIGHT - EXCELLENT
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.	TIME CODE 010 10 MINS	AMBER LIGHT - GOOD
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.	TIME CODE 030 1/2 HR	RED LIGHT - LOW
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.	TIME CODE 060 1 HR	RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE
TIME CODES ARE 3-DIGIT CODES CORRESPONDING TO THE NUMBER OF MINUTES.	TIME CODE 480 8 HRS	FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE
	TIME CODE 720 12 HRS	
	TIME CODE 999 16 HRS 39 MINS (MAXIMUM)	
	ALL TIMES ARE APPROXIMATE +/- 10%	

MASTER CODE (8 digits)

SUB-MASTER CODE (6 digits)

USER CODE (4 digits)

ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT